

# GELATOSUPERSHOW 2



MODELS H117 - H135	
120	RV TB
155	RV TB
170	RV TB
190	RV TB
220	RV TB

**ISA S.r.l.**

Via del Lavoro, 5  
06083 Bastia Umbra - Perugia - Italy  
Tel. +39 075 80171 - Fax +39 075 8000900  
[www.isaitaly.com](http://www.isaitaly.com)



Sistema di Qualità  
**ISO 9001**  
Cert. CISQ/CSQ 9130.TAIF











Sistema di Qualità  
**ISO 14001**  
Cert. CIS ECO ISO 9191.ISA3



<b>1. MANUFACTURER</b>	4
<b>2. WARRANTY TERMS AND CONDITIONS</b>	4
<b>3 EQUIPMENT IDENTIFICATION</b>	5
<b>4. USE</b>	6
4.1 Composition	6
<b>5. NOTES/IMPORTANT NOTES</b>	7
<b>6. SAFETY</b>	9
6.1 Safety devices installed	9
6.2 Fixed guards	9
6.3 Electrical power isolation	9
6.4 Residual risks	9
6.5 Risks due to contact with parts under stress	9
6.6 Fire	10
6.7 Explosive atmosphere	10
6.8 Slipping	10
6.9 Tripping	10
6.10 Circuit faults	10
6.11 Warning labels	10
6.12 Explosion hazard	10
6.13 Refrigerants (where applicable)	11
<b>7. DISPOSAL OF WASTE MATERIAL</b>	12
<b>8. INSTALLATION</b>	13
8.1 Storage and unpacking	13
8.2 Installation - Positioning - Environmental Conditions	13
8.3 Electrical connection	13
<b>9. MAINTENANCE</b>	14
<b>10. FAULTS - TECHNICAL AFTER-SALES ASSISTANCE</b>	15
10.1 Alarms list (if present)	16
<b>11. TECHNICAL SPECIFICATIONS</b>	17
11.1 Installation	18
11.2 Load limits	18
11.3 Levelling / Positioning	19
<b>12. CONTROL PANEL</b>	20
12.1 User Interface	21
12.1 Buttons	21
12.2 Led	23
12.2.1 Alarms	24
<b>13. CLEANING</b>	24
13.1 Internal	24
13.2 Condensing unit	24
13.3 External	24
<b>14. ATTACHMENTS</b>	25

The manual contains symbols to attract the reader's attention and highlight particularly important aspects. The table below illustrates the meaning of the various symbols used.

	<b>Read the instruction manual</b>
	<b>Use of protective clothing</b>
	<b>Danger: Live electrical parts</b>
	<b>Requests for maintenance or operations must be carried out by qualified staff or technical after-sales centres</b>
	<b>Attention / Danger</b>
	<b>Important information</b>
	<b>Information</b>
	<b>Operations that must be performed by two people</b>
	<b>Visual observation</b>
	<b>Notes / Important Notes</b>
	<b>On Board Condenser Unit</b>
	<b>Remote Condenser Unit</b>

## 1. MANUFACTURER

### ISA S.r.l.

Via del Lavoro, 5  
06083 - Bastia Umbra - Perugia - Italy  
Tel. +39 075 80171  
Fax +39 075 8000900

[www.isaitaly.com](http://www.isaitaly.com)

## 2. WARRANTY TERMS AND CONDITIONS



The seller guarantees the equipment for **12 (twelve) months from the date of delivery.**

The warranty includes repairs or replacements of any faulty parts due to manufacturing processes or installation after written communication has been received, stating the appliance serial number and date of installation.

The following are not covered by warranty:

- all flaws due to improper use of the equipment
- all flaws due to improper connection to the power grid
- all flaws due to standard component wear (for instance: breakage of compressors and neon lamps, if not due to manufacturing flaws)
- calls to request installation, technical instructions, adjustments, cleaning of the condenser

If the seller's technical staff detect any tampering, unauthorised repairs or inappropriate use of the appliance the warranty will no longer be valid.

Shipping for parts under warranty will be done only with payment on delivery.

Any damage to the appliance detected at the time of delivery due to transport must be reported on the same shipping note to claim compensation from the carrier.

The seller cannot be held liable in the event of damage to the stored product due to appliance failure

### 3. EQUIPMENT IDENTIFICATION

- Find the label affixed on the machine to read the technical data.
- Check the machine model and the power supply voltage before you perform any operation.
- If you uncover mismatches, contact the manufacturer or the company that supplied the machine immediately.

The diagram shows a technical label with the following fields and symbols:

- 1**: Four circles representing symbols of compliance.
- 2**: Manufacturer's address.
- 3**: Ord. Prod. / Prod. Ord.
- 4**: Tipologia / Type
- 5**: Modello / Model
- 6**: Articolo / Article
- 7**: Matricola Nr. / Serial Number
- 8**: Data Prod. / Prod. Date
- 9**: V (Voltage)
- 10**: Hz (Frequency)
- 11**: Capacità lorda / Gross volume
- 12**: W (Absorption at Rated Capacity)
- 13**: W (Absorption during Defrosting)
- 14**: W (Absorption of Heating Elements)
- 15**: W (Lamp Power)
- 16**: A (Fuse Value)
- 17**: Classe / Class
- 18**: Nr (Number of Motors)
- 19**: Type of Coolant
- 20**: Kg (Amount of Coolant)
- 21**: Classe / Class (Safety Class)
- 22**: Ordine Cliente / Customer order
- 23**: Customer order
- 24**: Foaming gas: CO<sub>2</sub> (WEEE Mark)

1	Symbols of Compliance
2	Manufacturer's address
3	Production Order
4	Type
5	Model Name
6	Article
7	Serial Number
8	Production Date
9 - 10	Power Supply Voltage and Frequency
11	Gross Capacity
12	Absorption at Rated Capacity
13	Absorption during Defrosting
14	Absorption of Heating Elements
15	Lamp Power
16	Fuse Value
17	Climate Class
18	Number of Motors
19	Type of Coolant
20	Amount of Coolant
21	Safety Class
22 - 23	Customer order
24	WEEE Mark

## 4. USE

This appliance is exclusively intended to **display and sell ice cream**.

The manufacturer is not liable for injury to persons or damage to property or the appliance itself caused by the displaying of products other than those described above.

Never use electric devices inside this appliance. Do not use mechanical or other means to accelerate the defrosting process, other than recommended by the manufacturer. Keep the air vents in the casing of the appliance or in the structure built into the wall free of obstructions.

**This appliance is equipped with automatic defrost.**

We suggest you for a better performance to remove of the ice cream show case; make a manual defrosting and keep the show case off for 12 hours.



### THE APPLIANCE IS INTENDED FOR PROFESSIONAL USE.

#### Uses not allowed

- Food preservation.
- Displaying and/or preserving non-food products (chemicals, pharmaceuticals, etc...).

## 4.1 COMPOSITION

The appliance is made up from a unique cabinet, onto which all devices necessary to make it a professional and efficient product for its declared use, are installed.

The appliance is made up from:

- Cooling system
- Condenser unit on board or remote
- Electric plant - Electronic control board
- Insulated monolithic structure in ecological polyurethane
- Swivel drive wheels (linear modules only)
- Internal lighting LED

## 5. NOTES / IMPORTANT NOTES



The contents of this manual are technical in nature and are the property of **ISA S.r.l.** The reproduction, disclosure or modification of all or part of its contents without written authorisation is forbidden. Any infringement will be legally pursued.

The manual and the conformity certificate are an integral part of the equipment and should always accompany the product in the event of a transfer to a new location or to a new owner. The user is responsible for the integrity of these documents, for their consultation and during the whole life cycle of the equipment itself. Keep this manual in a safe place. It should be available for consultation near the equipment at all times. If lost or destroyed, you can request a copy of the manual from **ISA S.r.l.** by specifying the exact model, serial number and year of manufacture. The manual reflects the manufacturing technology at the time of supply. The manufacturer reserves the right to modify its products in any way it deems necessary, with no obligation to update manuals and machines relating to previous manufacturing batches.

This equipment is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or by persons lacking the necessary experience and knowledge, unless they are supervised by a person responsible for their safety who has instructed them on how to use the equipment. Children should be supervised to ensure that they do not play with the equipment. Always refer to this manual before going ahead with any operation. Before doing any type of work, disconnect the equipment from the power supply. Any work on electric and electronic parts or cooling system components should only be carried out by trained personnel in compliance with current laws.

The Manufacturer cannot be held liable for any injury to persons or animals, or damage to the product itself in the event of:

- Improper use of the equipment or use of the appliance by unqualified or unauthorised personnel
- Failure to comply with current legislation
- Incorrect installation and/or power supply faults
- Failure to observe the instructions contained in this Manual
- Failure to follow the maintenance programme;
- Unauthorised modifications
- Installation of non-original spare parts in the equipment
- Installation and use of the equipment for purposes other than those for which the appliance was designed and sold
- Tampering with or damage to the power supply cable.

Liability for applying the safety instructions contained in this manual is held by the technical personnel responsible for the intended use of the equipment, who should ensure that authorised personnel:

- are qualified to carry out the requested activity
- are aware of, and carefully comply with, the instructions contained in this document
- are aware of and apply the general safety standards applicable to the equipment.

The buyer is responsible for training personnel using the appliance on the risks, safety devices and general health and safety rules required by the laws of the country where the appliance is installed.

Users/operators should be aware of the position of all the controls and how they work, as well as of the features of the appliance.

They should also read this manual in its entirety.

Maintenance work should be conducted by qualified personnel after the appliance has been properly prepared.



### Danger

Unauthorised tampering or replacement of one or more parts of the appliance, use of accessories that modify the use of the same and use of spare parts different than those recommended, can lead to injury.



### Danger

Any work conducted on the on the appliance **must** involve disconnection from the power socket and in any case, none of the protective elements (grid, casing) should be removed by non-qualified staff. The appliance should not be operated when these protective elements have been removed.

## STAFF TRAINING

The buyer is responsible for ensuring personnel who will use the appliance and maintenance technical staff are instructed and trained adequately.

The manufacturer is available for advice, clarifications, etc. so that the operator and technical staff can use the appliance correctly.

To ensure the operator's safety, appliance devices should be kept in constant working order. This manual is intended to illustrate the use and maintenance of the appliance. The operator has a responsibility and duty to carefully observe the instructions contained within it.

Failure to comply with safety standards may result in injury to personnel and damage to the equipment components and control unit. The user can contact the dealer to request additional information not contained in this document, or suggest improvements, at any time.



Before the product is delivered to the customer, it is essential that a **trained technician** checks that the appliance is operating correctly in order to achieve maximum performance.

## INTRODUCTION

ISA S.r.l. uses the best quality materials and their introduction on company premises, storage and use in production is continuously controlled to ensure the absence of damage, deterioration or malfunction. All construction elements were designed and built to ensure a high standard of safety and reliability. All appliances are subjected to a strict testing procedure before delivery. However, please bear in mind that product performance over time depends on correct use and adequate maintenance. This manual gives the instructions needed to maintain the aesthetic and functional characteristics of the device over time.



### Note

In order to avoid compromising the operation and safety of the equipment, particularly complex installation and maintenance activities are not documented in this manual and are performed by specialised technicians from the manufacturer.

The Use and Maintenance manual contains the necessary information for understanding the operational modes of the equipment and its correct use, in particular: the technical description of the various functional groups, safety equipment and systems, operation, use of the instruments and the interpretation of any diagnostic signals, main procedures and information regarding ordinary maintenance procedures. For correct use of the appliance, the working environment should comply with current health and safety standards.

The safety requirements, indications, standards and notes illustrated in the various chapters of the manual are aimed at establishing a code of conduct and a series of obligations to be observed when performing the various activities, in order to create safe conditions for personnel, the equipment and the surrounding environment. The safety standards reported in this document are intended for trained, authorised personnel responsible for:

- Transport
- Installation
- Operation
- Management
- Maintenance
- Cleaning
- De-commissioning
- Disposal



### Attention

Reading this manual, albeit in full, is no substitute for adequate user experience. therefore it should only be considered a useful reminder of the technical features and the main operations to perform.



### Warning

Installers and users must read and understand all of the instructions contained herein before performing any operation on the equipment.



## 6. SAFETY

The appliance is equipped with safety devices:

### 6.1 SAFETY DEVICES INSTALLED

Devices whose operation prevents the occurrence of risk situations in operating conditions (e.g. fuses, pressure switches, protections, magnet circuit breakers, etc.).

### 6.2 FIXED GUARDS

Fixed protective devices consist of fixed perimeter shields, which are used to prevent access to the internal parts of the machine.



#### **Danger**

Restarting the appliance after maintenance without having correctly restored the panels is prohibited.



#### **Visual Inspection**

You should periodically check the integrity of the fixed panels and their corresponding fasteners, focusing in particular on the protective panels.

### 6.3 ELECTRICAL POWER DISCONNECTION

Before conducting any maintenance work on the refrigerated cabinet or part of it, it is necessary to isolate the power supply.



#### **Danger**

Please remember to fully disconnect the refrigerated cabinet from the power supply in the event of maintenance work during which the operator cannot prevent any accidental closure of the circuit by other people.

### 6.4 RESIDUAL RISKS

During design the manufacturer examined all the areas or parts at risk. Therefore, all necessary precautions have been taken to prevent risks to persons and to the appliance.



#### **Attention**

Periodically check that all safety devices are operating correctly.  
Do not remove the fixed guards.  
Do not introduce objects or tools into the work area.

However, though the appliance is fitted with the aforementioned safety devices, there are still some risks that cannot be eliminated, but reduced via corrective actions by the final user and correct operational procedures.

### 6.5 RISKS DUE TO CONTACT WITH PARTS UNDER STRESS

Risk of breaking or damaging the electrical components of the appliance, with a possible reduction in safety levels, following a short circuit.

Before connecting the electricity supply, make sure there is no ongoing maintenance work.



#### **Attention**

Before making the connection, check that the DC current in the installation point does not exceed that indicated on the protective switches present in the electric control board. If this is not the case, the user must provide the appropriate limiting devices.  
Any electrical modifications are strictly forbidden in order to prevent additional unforeseen hazards and risks.

## 6.6 FIRE



### **Danger**

In the event of a fire, immediately disconnect the master switch from the main power supply line.

## 6.7 EXPLOSIVE ATMOSPHERE

The equipment must not be located in an area classified as an explosion risk according to 1999/92/EC such as:

### **Zone 0**

An area in which there is a permanent, long-lasting or frequently explosive atmosphere made up of a mixture of air and flammable substances in the form of gases, fumes or steam.

### **Zone 1**

An area in which the formation of an explosive atmosphere, made up of a mixture of air and flammable substances in the form of gases, fumes or steam is occasionally probable during normal activities.

### **Zone 20**

An area in which there is a permanent, long-lasting or frequently explosive atmosphere in the form of clouds of combustible dust in the air.

### **Zone 21**

An area in which the formation of an explosive atmosphere in the form of clouds of combustible dust is occasionally probable during normal activities.

## 6.8 SLIPPING



Any leaks in the areas surrounding the appliance may cause personnel to slip. Make sure there are no leaks and always keep the area clean.

## 6.9 TRIPPING



Generally untidy deposits of material may constitute a tripping hazard and a total or partial obstruction of emergency exit routes.

Ensure that operating and transit areas and emergency exit routes are free from obstacles in compliance with current legislation.

## 6.10 CIRCUIT FAULTS

Due to possible failures, the safety circuits can lose their effectiveness, lowering the level of safety. Perform periodic checks of the operating conditions of the safety devices.

## 6.11 WARNING LABELS (if any)

The appliance is fitted with danger, warning and instruction labels, in accordance with the standards that apply to graphic symbols used on systems and plants.

The notices are located where they are visible.



### **Attention**











Removal of the warning labels from the appliance is absolutely forbidden.

The user must replace the warning labels if they become illegible due to wear.

## 6.12 EXPLOSION HAZARD

Do not store products that contain combustible gaseous propellants and explosive substances inside the appliance.

## 6.13 REFRIGERANTS (where applicable)

REFRIGERANT	DESCRIPTION
	 <p>The refrigerant <b>R290</b> is a gas that is compatible with the environment, but <b>highly flammable</b>. Pay close attention during transport, installation and that the destruction not to damage the refrigerant pipelines.</p> <p><b>IN THE EVENT OF DAMAGE:</b> Keep flames or sources of ignition away from the appliance. Properly ventilate the premises for a few minutes. Turn the unit off, pull the plug. Inform customer support service. The more refrigerant containing an appliance, the greater must be the environment in which there is the unit. In areas too small, in the event of leakage can form a flammable mixture of air and gas. <b>The volume of the room where the appliance is installed must be at least 19 m<sup>3</sup> for each cooling system present in the room.</b></p> <p><b>WARNING</b>  Maintenance must be performed by qualified personnel that has been to work with flammable refrigerants.</p>
	 <p>The refrigerant <b>R600a</b> is a gas that is compatible with the environment, but <b>highly flammable</b>. Pay close attention during transport, installation and that the destruction not to damage the refrigerant pipelines.</p> <p><b>IN THE EVENT OF DAMAGE:</b> Keep flames or sources of ignition away from the appliance. Properly ventilate the premises for a few minutes. Turn the unit off, pull the plug. Inform customer support service. The more refrigerant containing an appliance, the greater must be the environment in which there is the unit. In areas too small, in the event of leakage can form a flammable mixture of air and gas. <b>The volume of the room where the appliance is installed must be at least 17 m<sup>3</sup> for each cooling system present in the room.</b></p> <p><b>WARNING</b>  Maintenance must be performed by qualified personnel that has been to work with flammable refrigerants.</p>
	<p>The refrigerant <b>R744</b> is a gas that is compatible with the environment. Pay close attention during transport, installation and that the destruction not to damage the refrigerant pipelines.</p> <p><b>IN THE EVENT OF DAMAGE:</b> Keep away from the flame or ignition sources. Properly ventilate the premises for a few minutes. Turn the unit off, pull the plug. Inform customer support service.</p> <div style="border: 1px solid black; padding: 5px;"> <p><b>WARNING</b> The refrigerant system is <b>High Pressure</b>. Do not tamper with the system, but call a specialised and qualified technician before disassembly. Maintenance must be performed exclusively by qualified staff.</p>  <p><b>HIGH PRESSURE</b></p> </div>  

## 7. DISPOSAL OF WASTE MATERIAL

During normal operation, the appliance does not generate any environmental contamination. At the end of its life cycle, or if it is necessary to proceed to permanent decommissioning, we recommend following the procedures below:

### DISPOSAL (User)



The symbol, applied to either the product or its packaging, indicates that the product should not be considered as normal domestic waste, but should be taken to a waste collection point for the recycling of electrical and electronic appliances. The correct disposal of this product helps to prevent potential negative consequences that might derive from inadequate product disposal. For detailed information about recycling this product, contact your council, your local waste collection service or the store where you purchased the product.

### PROCEDURE FOR DISPOSAL and RECYCLING AT THE END OF APPLIANCE LIFE SPAN (Authorised Bodies)

- Switch off the equipment and unplug the power supply cable.
- Remove the lamps (if installed). These should be disposed of separately.
- Remove the power units and the electronic cards. These should be disposed of separately.
- Remove all the independent parts (grids, casings, profiles, etc.) and group them according to shared features in order to access the heat exchangers, pipes, cables, etc. and be careful not to damage the cooling circuit.
- Remove all mobile parts (doors, sliding doors, glass parts, etc.) and group the various materials according to their features.
- Check the type of refrigerant on the plate positioned inside the counter; extract the refrigerant and dispose of it through authorised services.
- Disconnect the evaporator, the condenser, the compressor, the pipes and fans. These are made of copper, aluminium, steel and plastic and should therefore be disposed of separately.
- On removal of all guards and the various components from the frame, separate the different types of material making up the appliance (plastic, sheet steel, polyurethane, copper, etc) and collect them separately.



All recyclable materials and waste should be processed and recycled by professionals, in compliance with the laws in the country in question. The company responsible for recycling the materials should be registered and certified as a waste disposal service in accordance with the country in question



#### Attention

Illegal disposal of the product by the owner will result in administrative sanctions as required by current laws. Disposal of the product should comply with current laws on the disposal of coolant liquids and mineral oils.



#### Important

If the crossed wheelie bin sign is not present on the appliance, it means that the disposal of the product is not the manufacturer's responsibility. In this case, the Regulations regarding the disposal of waste in force are valid.



#### Additional information

Further information on the disposal of liquid coolant, oils and other substances is available on the safety data sheet corresponding to the substance itself.

## 8. INSTALLATION

This manual supplies the information necessary for correct unpacking, procedures for positioning and connection to mains electricity.

### 8.1 STORAGE AND UNPACKING

The appliance, with or without the packaging, should be carefully stored inside warehouses or in areas away from the elements and direct sunlight, at a temperature between **00** and **+40 °C**.



The appliance should only be moved by qualified personnel operating forklift trucks, the power of which should be suited to handling the weight of the product: during said operation the appliance **MUST** be placed on the special pallet supplied.

Unpack the appliance by removing the screws fixing it to the pallet.  
All packaging materials are recyclable and should be disposed of in accordance with local regulations. Please destroy "plastic" bags to prevent them from becoming hazardous to children (suffocation).

### 8.2 INSTALLATION - POSITIONING - ENVIRONMENTAL CONDITIONS



#### Attention

A dry room that can be ventilated is the suitable location for the appliance's installation. There should be a good air flow around the compressor/condensing unit. Therefore the area around the unit should not be obstructed by boxes or other objects.

Position the appliance away from heat sources (radiators, stoves of all types, etc.) and away from the effects of continuous currents of air (e.g. caused by fans, air conditioning vents, etc.). If it is unavoidable to install near a heat source, use a suitable insulating plate, Also avoid exposure to direct sunlight; all of this causes the temperature inside the refrigerated compartment to rise with negative consequences on operation and energy consumption. Do not use the appliance outdoors and do not leave it exposed to rain.

### 8.3 ELECTRIC CONNECTION



#### Attention

Check that the network voltage matches the one displayed on the identification plate of the appliance, and that the power is adequate.

Check on the socket that the power supply voltage provides rated voltage ( $\pm 10\%$ ) when you start up the compressor.

The plug should be directly connected to the electrical socket. It is forbidden to connect the plug to the socket by means of multiple socket extensions or adaptors.

The plant power supply socket must be fitted with a disconnection device from the mains electricity (dimensioned to the load and in compliance with Standards in force), which guarantees complete disconnection in category III (3) over-voltage conditions and therefore protects the circuits against earth faults, overloads and short circuits.

Do not route the electricity cable in passageways.



#### Attention

Earthing is necessary and mandatory by law.

## 9. MAINTENANCE

The **Staff in charge of the appliance** must control and respect the expiry dates for maintenance, given in the table below, calling the authorised **Technical After-sales assistance** when indicated.

OPERATION	FREQUENCY			AUTHORISED PERSONNEL
		ROUTINE	EXTRAORDINARY	
Cleaning the external surfaces	Depending upon Use and Necessity	X		User
Cleaning the accessible internal parts (without the use of tools)	Depending upon Use and Necessity	X		User
Check power cable, plugs and sockets	Monthly Every 6 months	X		User
Check integrity of sealing gaskets	Monthly	X		User
Cleaning the defrosting water water collection tray	Every six months Depending upon use and necessity	X		Technical Assistance
Condenser cleaning	Monthly Every 6 months	X		Technical Assistance
Control compressor oil level (if present)	Every 6 months	X		Technical Assistance
Air tank draining (if present)	Every 6 months	X		Technical Assistance
Check pneumatic connections (if present)	Every 6 months	X		Technical Assistance
Check the integrity of the chiller system piping	Every 6 months	X		Technical Assistance
Inspect cables and internal power connections	Every 6 months	X		Technical Assistance
Cleaning condensate drying sponges (if present)	Every 6 months	X		Technical Assistance
Replacing the lamps / LED (if present)			X	Technical Assistance
Control panel replacement (ECU - thermal switch - etc.)			X	Technical Assistance
Power cable, plug and/or socket replacement			X	Technical Assistance



### Attention

After every maintenance operation it is **mandatory** to perform all electric safety tests in compliance with IEC EN 50106.

## 10. FAULTS - TECHNICAL AFTER-SALES ASSISTANCE

If the appliance is not working properly or stops working, **before contacting** the **Customer support centre**, check the following:


FAULT	CAUSE	SOLUTION	AUTHORISED PERSONNEL
The appliance is not working	Blown protective fuse	Previously find the cause of the intervention of the switch, and then re-introduce the new fuse.	User
	The master switch is open	Close the master switch.	User
	The plug is not inserted	Insert the plug.	User
	Electric black-out	If the black-out should be prolonged, transfer the product into an appropriate cold storage container.	User
The internal temperature is not low enough	Evaporator/s obstructed completely by ice	Carry out an additional defrosting cycle.	User
	The wrong temperature has been set on the electronic control board	Set the appropriate temperature.	User
	The appliance is affected by draughts or is exposed to direct or reflected sunlight	Remove any excessive draughts and prevent any direct or reflected sunlight.	User
	Insufficient cooling air flow rate of the air condenser	Remove anything that may affect air flow inside the condensing unit (paper sheets, cardboard, grids with an insufficient number of holes, etc.).	User
	Internal fans at standstill or with fans damage	Contact the <b>Technical Assistance</b> service	<b>Technical Assistance</b>
	Internal ventilation is too high	Contact the <b>Technical Assistance</b> service	<b>Technical Assistance</b>
	Low electronic control board efficiency	Contact the <b>Technical Assistance</b> service Replace the electronic control board. If the control unit is set up especially for must <b>R290</b> refrigerant, it must only be replaced with an original replacement from ISA. Replace the temperature probes only after checking which of the two is not operating efficiently.	<b>Technical Assistance</b>
	Air condenser blocked by dust or dirt in general	Contact the <b>Technical Assistance service</b> . Clean the condensing unit thoroughly.	<b>Technical Assistance</b>
The compressor does not start-up or operates for a few moments	Insufficient refrigerant load in the cooling system	Contact the <b>Technical Assistance</b> service Find the cause behind the lower amounts of coolant and eliminate it. Top up the coolant. If necessary, empty the system before topping up.	<b>Technical Assistance</b>
	No electric power supply to the appliance	Check if there is a power cut. Close the various switches on the power supply line.	User
	The power supply voltage is too low	Check that the network voltage of the power supply cable is 220V +/- 10%.	User
	Temperature set too high	If the set temperature is higher than that of the air in the display area, the compressor does not activate itself. Set a more suitable temperature if the current value is not low enough	User
	The pressure switch (if any) was activated at maximum pressure	Contact the <b>Technical Assistance service</b> . Check the reasons why the pressure switch is operating at maximum pressure levels, such as: air condensing unit blocked, condensing unit fan stopped, ambient temperature too high, pressure switch broken.	<b>Technical Assistance</b>

## 10.1 ALARMS LIST (if present)

ALARM	DESCRIPTION	OUTPUTS	AUTHORISED PERSONNEL
<b>P1</b> <b>EO</b>	Broken thermostat probe. Compressor trip with "CO <sub>n</sub> " and "CO <sub>F</sub> " parameters	The alarm starts a few seconds after the probe breaks down; it stops a few seconds after the probe starts working again properly. We recommend checking the probe connections before replacing it. Call <b>Technical Assistance</b> .	<b>Technical Assistance</b>
<b>P2</b> <b>E1</b>	Broken evaporator probe. Set time for defrosting	The alarm starts a few seconds after the probe breaks down; it stops a few seconds after the probe starts working again properly. We recommend checking the probe connections before replacing it. Call <b>Technical Assistance</b> .	<b>Technical Assistance</b>
<b>HA</b> <b>HI</b>	High temperature alarm	The alarm stops automatically on reaching the set temperature. Check the programming. Call <b>Technical Assistance</b> .	<b>Technical Assistance</b>
<b>LA</b> <b>LO</b>	Low temperature alarm	The alarm stops automatically on reaching the set temperature. Check the programming. Call <b>Technical Assistance</b> .	<b>Technical Assistance</b>
<b>EA</b> <b>IA</b> <b>CB</b>	External alarm	The external alarm stops after the digital input is deactivated. It is restored automatically. The alarm is linked to the triggering of the pressure switch and/or the compressor circuit breaker, when present. Call <b>Technical Assistance</b> .	<b>Technical Assistance</b>
<b>ETc</b> <b>RTF</b>	Real time clock is broken	Reset the clock. If the alarm persists, replace the instrument. Call <b>Technical Assistance</b> .	<b>Technical Assistance</b>
<b>EE</b>	Machine parameter error	The instrument is damaged. It must be replaced. Call <b>Technical Assistance</b> .	<b>Technical Assistance</b>
<b>EF</b>	Operating parameters error	The instrument is damaged. It must be replaced. Call <b>Technical Assistance</b> .	<b>Technical Assistance</b>




## 11. TECHNICAL SPECIFICATIONS

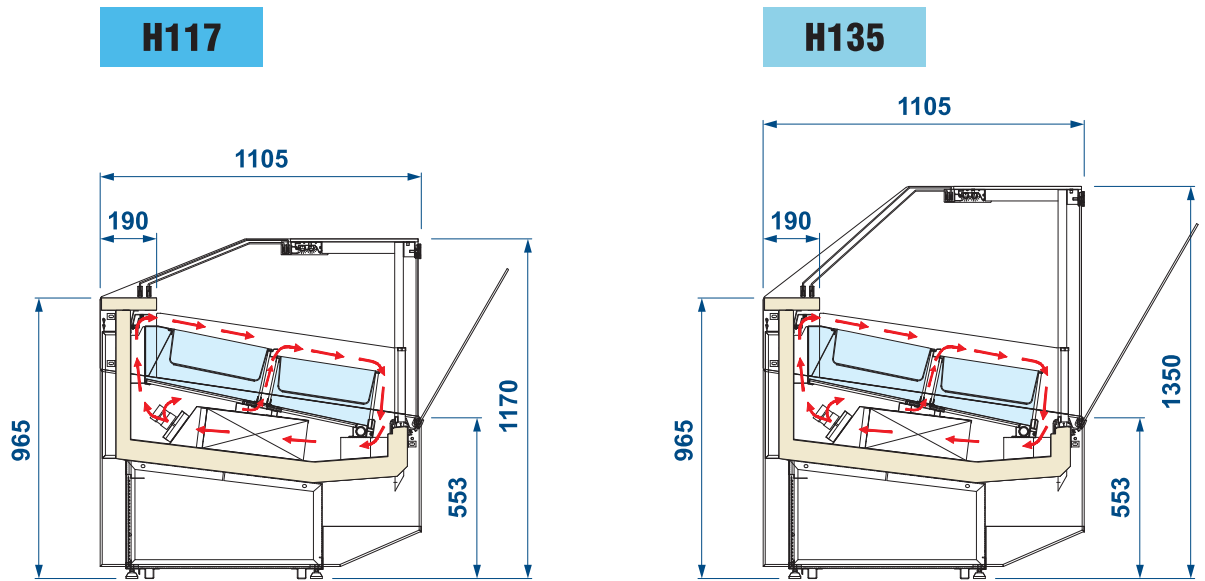

		120	155	170	190	220
External dimensions (l x p x h)	H117 mm	1189 x 1135 x 1170	1519 x 1135 x 1170	1684 x 1135 x 1170	1849 x 1135 x 1170	2179 x 1135 x 1170
	H135 mm	1189 x 1135 x 1350	1519 x 1135 x 1350	1684 x 1135 x 1350	1849 x 1135 x 1350	2179 x 1135 x 1350
Refrigeration		Ventilated				
Defrosting		Reverse Cycle				
Climate class	N°	4				
Environmental conditions	°C / % RH	30 / 55				
Product class		S				
Adjustment temperature	°C	-20 / +2				
Safety class (IEC EN 60335-2-89)	N° / °C (environment)	5 / 43 ± 2°C				
Refrigerant		R404A				
Power supply	V / ph / Hz	400 / 3 / 50				
Electrical absorption (normal conditions)	W / A	1740 / 3.1	2470 / 6.3	2780 / 6.8	3600 / 9.7	3950 / 9.9
Electrical absorption (in defrosting)	W / A	3260 / 7.9	3870 / 8.5	4250 / 9.6	4600 / 10.8	5040 / 11.4
Weight (net)	H117 Kg	320	368	409	459	510
	H135 Kg	331	382	419	468	520

## ICE CREAM CONTAINER DISPLAY KIT MODULARITY

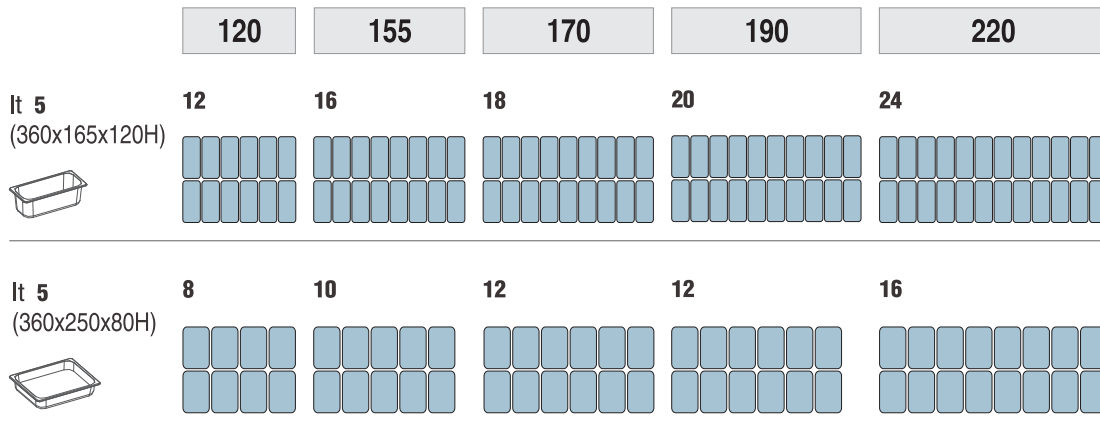


### 11.1 INSTALLATION



#### Attention

It is fundamental to respect the distances indicated (mm) for correct installation of the appliance.

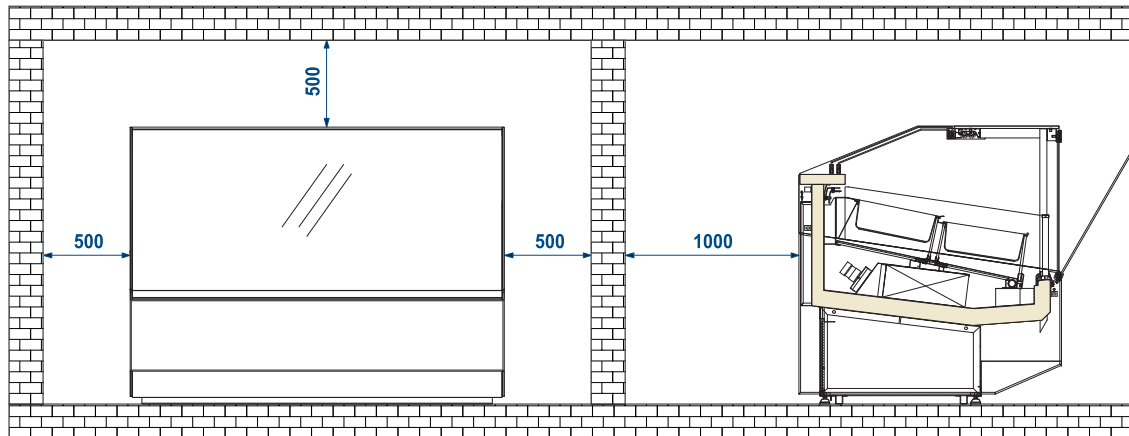

### 11.2 LOAD LIMITS



#### Attention

It is fundamental that you do not exceed the load limits indicated in order to not alter the correct air circulation and thus prevent a high product temperature.



### 11.3 LEVELLING / POSITIONING




#### Warning

The **standard** appliance is equipped with height-adjustable feet.  
The appliance may be equipped (**optional**) with rotating wheels to make it easier to move.


After it is positioned, the appliance must be stabilised on the floor by adjusting the feet until they do not rest on the wheels.

After positioning it is **absolutely necessary** to level the appliance.

After positioning it is **absolutely necessary** that the cabinet shall be sealed to the floor.

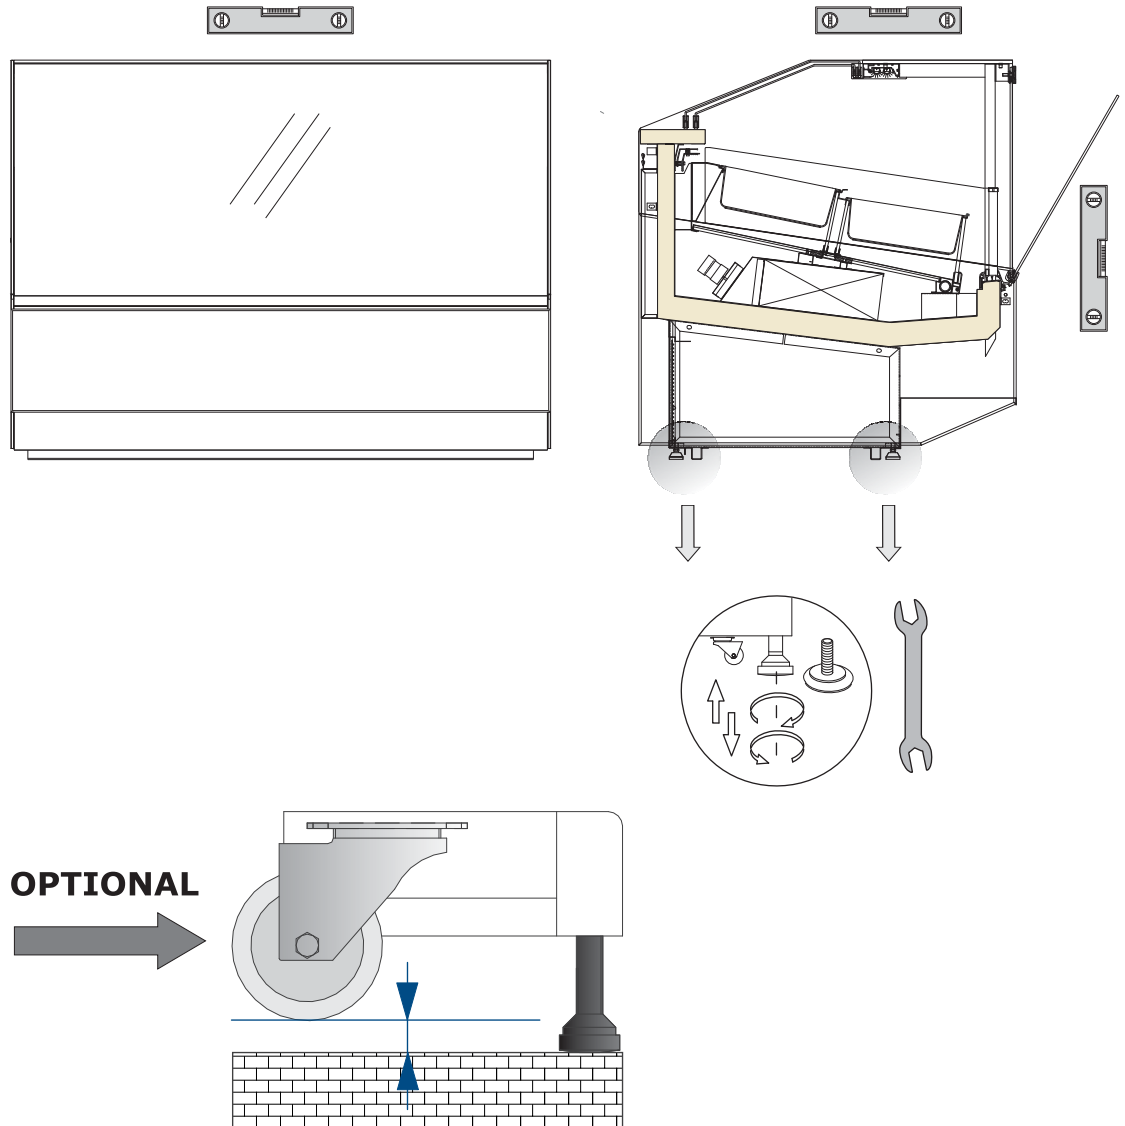

## 12. CONTROL PANEL

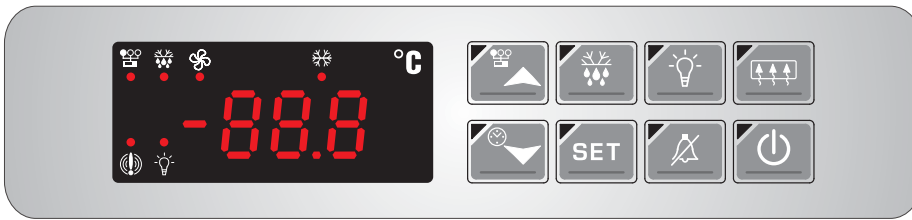

### Attention

The electronic control board is installed already programmed. Any changes to the control board settings can be carried out exclusively by qualified technical personnel.

### START-UP

At the first start-up and after any period of inactivity longer than 8 hours without power (with the socket unplugged), you must wait 1 hour and 30 minutes with the refrigerating cabinet powered (socket plugged), before starting the compressor.


At the first start-up and after a period of inactivity, the electronic control board could signal alarms (HI, HF, etc.).







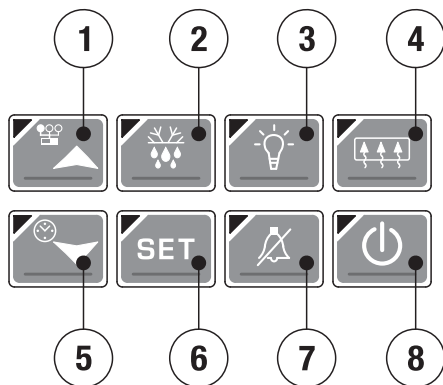

The alarm can be silenced by pressing button "8" Set the electronic control board for 1 second.


You can delete the alarm from the control board display by pressing the **1** button HACCP for 5 seconds after the display has reached the operating temperature (setpoint).

## 12.1 USER INTERFACE

### 12.1 BUTTONS




- 1  In program, it pages through the codes of the parameters or increases the values. If it is pressed for 3 s it allows access to the section menu.
- 2  Holding it pressed in for 3 s starts the manual defrost cycle. If pressed during display time, it allows the defrosting schedules to be set-up.
- 3  Turns the lights on and off.
- 4  Activate and deactivate the auxiliary port.
- 5  In programming, it pages through the parameters or decreases the values. If pressed for 3 s, it shows the current time and day and enables access to programming and time slots.
- 6  View or modify the set point. In program select a parameter or confirm a value. If pressed during display time, the times and holidays can be set.
- 7  Silence the buzzer.
- 8  Turns the equipment on and off.

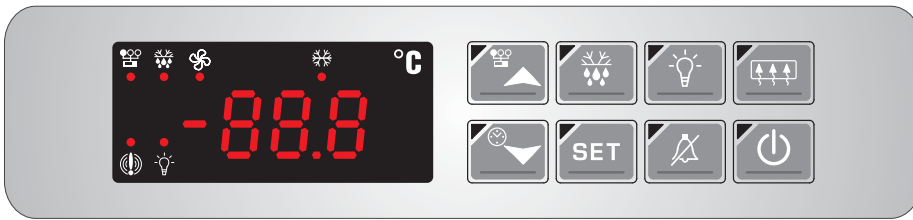





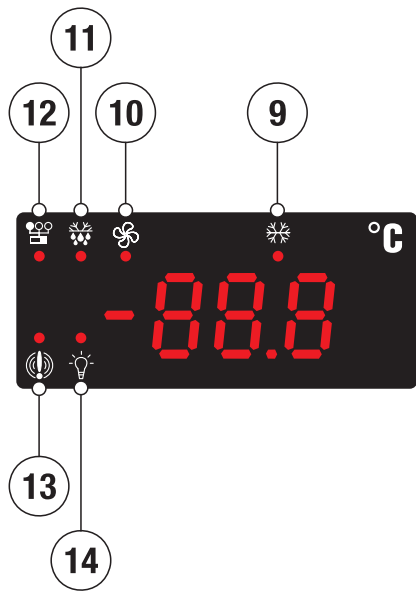

## NORMAL FUNCTION

	One touch key	Combined touch with other keys	Start-Up
	<p><b>TO DISPLAY OR CHANGE THE SET POINT</b></p> <ol style="list-style-type: none"> <li>1. Press and release the SET key: the set point will immediately be displayed</li> <li>2. The SET LED will blink</li> <li>3. To change the value, use the &lt; and &gt; keys.</li> <li>4. To save the new set point, press the SET key or wait 15 s to exit from programming</li> </ol>		
	<p><b>TO START A MANUAL DEFROST CYCLE</b></p> <ol style="list-style-type: none"> <li>1. Press the DEF key for more than 2 seconds.</li> </ol>		
 + 		<p><b>TO LOCK THE KEYBOARD</b></p> <ol style="list-style-type: none"> <li>1) Keep the &lt; and &gt; keys pressed for a few seconds, until "POF" appears.</li> <li>2) At this point the keyboard is locked: it is only possible to view the set points of minimum and maximum temperatures.</li> </ol> <p><b>TO UNLOCK THE KEYBOARD</b></p> <p>Keep the &lt; and &gt; keys pressed for a few seconds, until "Pon" appears, blinking. THE ON/OFF FUNCTION</p>	
	<p>When the ON/OFF key is pressed, the equipment will display OFF for 5 s and the ON/OFF LED will turn on.</p> <p>When in this configuration, the loads and all adjustments are disabled. Press the key once again to return the equipment to ON.</p> <p>The OFF condition permits the monitoring equipment to be excluded without causing any alarms.</p> <p><u>NOTE: in OFF the LIGHT and AUX keys remain active.</u></p>		
	<p><b>TO VIEW THE CURRENT TIME AND DAY</b></p> <ol style="list-style-type: none"> <li>1) Press the &lt; key for 3 s.</li> <li>2) The following messages will appear: Hur (hur=hour) and hour Min (Minute/minutes) and minutes Day and current day. Mon (Monday), Tue (Tuesday), Wed (Wednesday), Thu (Thursday), Fri (Friday), Sat (Saturday), and Sun (Sunday)</li> </ol> <p>Press the &lt; key or wait 5 s to view the normal temperature.</p>		
  	<p><b>TO PROGRAM THE CURRENT TIME AND DAY</b></p> <ol style="list-style-type: none"> <li>1) Press the &lt; key for 3 s.</li> <li>2) The time and day will be displayed</li> <li>3) By pressing the SET key it is possible to set the current hour, minutes and day and three holidays of the week.</li> <li>4) To exit, press SET+&lt;, when a parameter is displayed, or wait 15 s without pressing any keys.</li> </ol>		

## 12.2 LED



- 9  ON (STEADY) : Solenoid valve activated  
BLINKING : Programming phase (blinking together with LED ✱)
- 10  ON (STEADY) : Fan on  
BLINKING : Programming phase (blinking together with LED ✱)
- 11  ON (STEADY) : Defrost activated  
BLINKING : Dripping time in process
- 12  ON (STEADY) : Keyboard in "ALL" mode  
BLINKING : Keyboard in RVM mode (remote control)
- 13  ON (STEADY) : Alarm signal  
- In program "Pr2" indicates that the parameters is also present in "Pr1"
- 14  ON (STEADY) : Lights on

## 13. CLEANING


### 13.1 INTERNAL

- a) Remove the product contained in the cabinet and put it immediately in cold storage in order to guarantee correct preservation.
- b) Shut off the appliance. Wait at least 4 to 6 hours, until the ice on the evaporator has melted completely, before proceeding with cleaning operations. We recommend waiting until the following day to make sure defrosting is complete.
- c) Remove the central support bar and raise the guards on the display tank.
- d) Wash the bottom of the tank and the sides with a mild detergent, warm water and a cloth or a non-abrasive sponge. Rinse well and dry using a cloth.
- e) If the bottom panel is secured with screws, remove them.
- f) Remove the plastic caps that cover the holes for removing the guards using a screwdriver. Lift and remove the guards.
- g) Wash the bottom of the tank and the sides with a mild detergent, warm water and a cloth or a non-abrasive sponge. Rinse well and dry using a cloth.
- h) If the cabinet is connected with a ground discharge, pour some warm water with a sanitising solution suited for the intended use. In terms of quantity, the amount of solution used should be enough to remove any product residues and disinfect the whole drainage channel. If the appliance is not connected to a drain channelled into the ground, follow the procedure described in the previous paragraph. The water used to rinse the solution should be collected in the tray located inside the base of the appliance. Clean and disinfect the tray.

### 13.2 CONDENSING UNIT

#### REAR ACCESS

- a) Remove the screws from the protective grid
- b) Remove the protective grid. Clean the condenser unit with a vacuum brush.

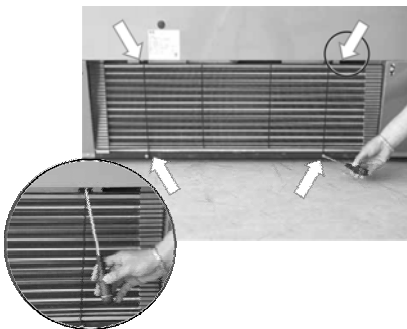

#### Attention

Clean the **CONDENSER** using a brush with soft bristles; carry out the operation, being careful not to bend the condenser foils.



### 13.3 EXTERNAL

The materials listed below must be cleaned as follows:

#### STAINLESS STEEL

Only use warm water and non-aggressive detergents and then rinse and dry using a soft cloth.

#### ACRYLIC OR POLYCARBONATE

Wash with lukewarm water, using a soft cloth or a chamois cloth. Do not use detergents, alcohol, acetone or solvents. Do not use abrasive cloths or sponges.

#### GLASS

Only use products specifically designed for cleaning glass. We do not recommend using tap water, which may leave calcium deposits on the surface of the glass.



## 14. ATTACHMENTS

No.		Code	Page
1	Declaration of Conformity		26
2	Wiring diagram	412100583000	27
3	Wiring diagram	412100585000	28

## DECLARATION OF CONFORMITY

We: **ISA S.r.l.**  
Via del Lavoro, 5 - 06083 - Bastia Umbra (PG)

declare under our own responsibility, that the product:

Product: **GELATOSUPERSHOW 2**  
Serial number: XXXXXXXXXXXXXXXXX

To which this declaration refers, is in compliance with e following:

### MACHINERY SAFETY

General electric safety Standard EN 60335-1/Ed.2002+Modifications A11:2004,A1:2004,A12:2006,A2:2006 + A13:2008, A14:2010, A15:2011. Particular requirements for commercial refrigerating appliances EN 60335-2-89/Ed.2010. Standard for Measuring Electromagnetic Fields (EMF) of Electrical Appliances EN 62233:2008, Directive 2006/95/EC of the European Parliament and the Council of 12th December 2006 on the harmonisation of the Laws of Member States relating to electrical equipment for use within certain voltage limits EN 62471/Ed.2009 Photo-biologic safety of lamps and lamp systems

### ELECTROMAGNETIC COMPATIBILITY (EMC)

Limits and methods of measurement of radio interference characteristics of household appliances and similar motor-operated and thermal appliances, of equipment, electrical appliances and similar equipment EN 55014-1 (valid until 2009: Ed.2000+Amendments A1:2001, A2:2002 - or: Ed.2006)

Minimum requirements for household appliances, tools and similar electrical appliances EN 55014-2 (Ed.1997+Amendment A1:2001) Part 3: Limits – Section 2: Limits for harmonic current emissions (equipment input current=16A per phase) EN61000-3-2 (valid until 2009:Ed.2000+Modification A2:2005-or: Ed.2006) Part 3:Limits-Section 3:Limitation of voltage fluctuations and flicker in low-voltage supply systems for equipment with rated current=16A EN61000-3-3 (Ed.1995+Modifications A1:2001,A2:2005) Part 4: Testing and measurement techniques Section 2:Electrostatic discharge immunity test EN61000-4-2 (Ed.1995) Part 4: Testing and measurement techniques Section 4: Electrical fast transient/burst immunity test EN61000-4-4 (Ed.1995)

### PRESSURE EQUIPMENT DIRECTIVE (PED) 97/23/EC

As the equipment falls into a class lower than I, it is excluded from the PED's application field (art.1 par.3.6)

### FOODSTUFF COMPATIBILITY

Regulation (CE) N.1935/2004 of the European Parliament and of the Council dated 27 October 2004 Regulation (CE) N.2023/2006 of the Council dated 22 December, Directive 2008/39/CE of the Council dated 6 March 2008 Directive 2007/19/CE of the Council dated 30 March 2007 Directive 2005/79/CE of the Council dated 18 November 2005 Directive 2004/19/CE of the Council dated 10 March 2004 Directive 2004/1/CE of the Council dated 6 January 2004 Regulation (UE) 10/2011 of the Council dated 14 January 2011

### ROHS and WEEE

Directive 2011/65/EC directive of the European Parliament and of the Council of 8th June 2011  
Directive 2002/96/EC of the European Parliament and of the Council of 27th January 2003

### REACH

Regulation (CE) n. 1907/2006 of the European parliament and council dated 18 December 2006 concerning the recording, evaluation, authorisation and restriction of the chemical substances (REACH), which establishes a European Agency regarding chemical substances, which modifies the Directive 1999/45/CE and that repeals the Regulation (CEE) n. 793/93 of the Council and the regulation (CE) n. 1488/94 of the Commission 91/155/CEE, 93/105/CE and 2000/21/CE


### SUBSTANCES THAT REDUCE THE OZONE LAYER

Regulation (CE) N. 1005/2009 dated 16 September 2009 (Official Journal (OJ) of the European Union 31/10/2009 L286)  
According to the requirements set by Directives: 2006/95/EC, 2004/108/EC, 2006/42/EC, 97/23/EC

The person authorised to draw-up the Technical Folder is Mr. **Minelli Maurizio** (Technical Department Manager)  
Via del Lavoro 5 - 06083 Bastia Umbra (PG)

Bastia Umbra: **05 / 02 / 2014**  
(place and date of issue)

Minelli Maurizio

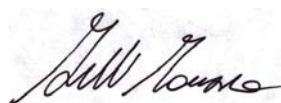


GELATOSUPERSHOW 2

USE AND MAINTENANCE MANUAL

428000533037

EN

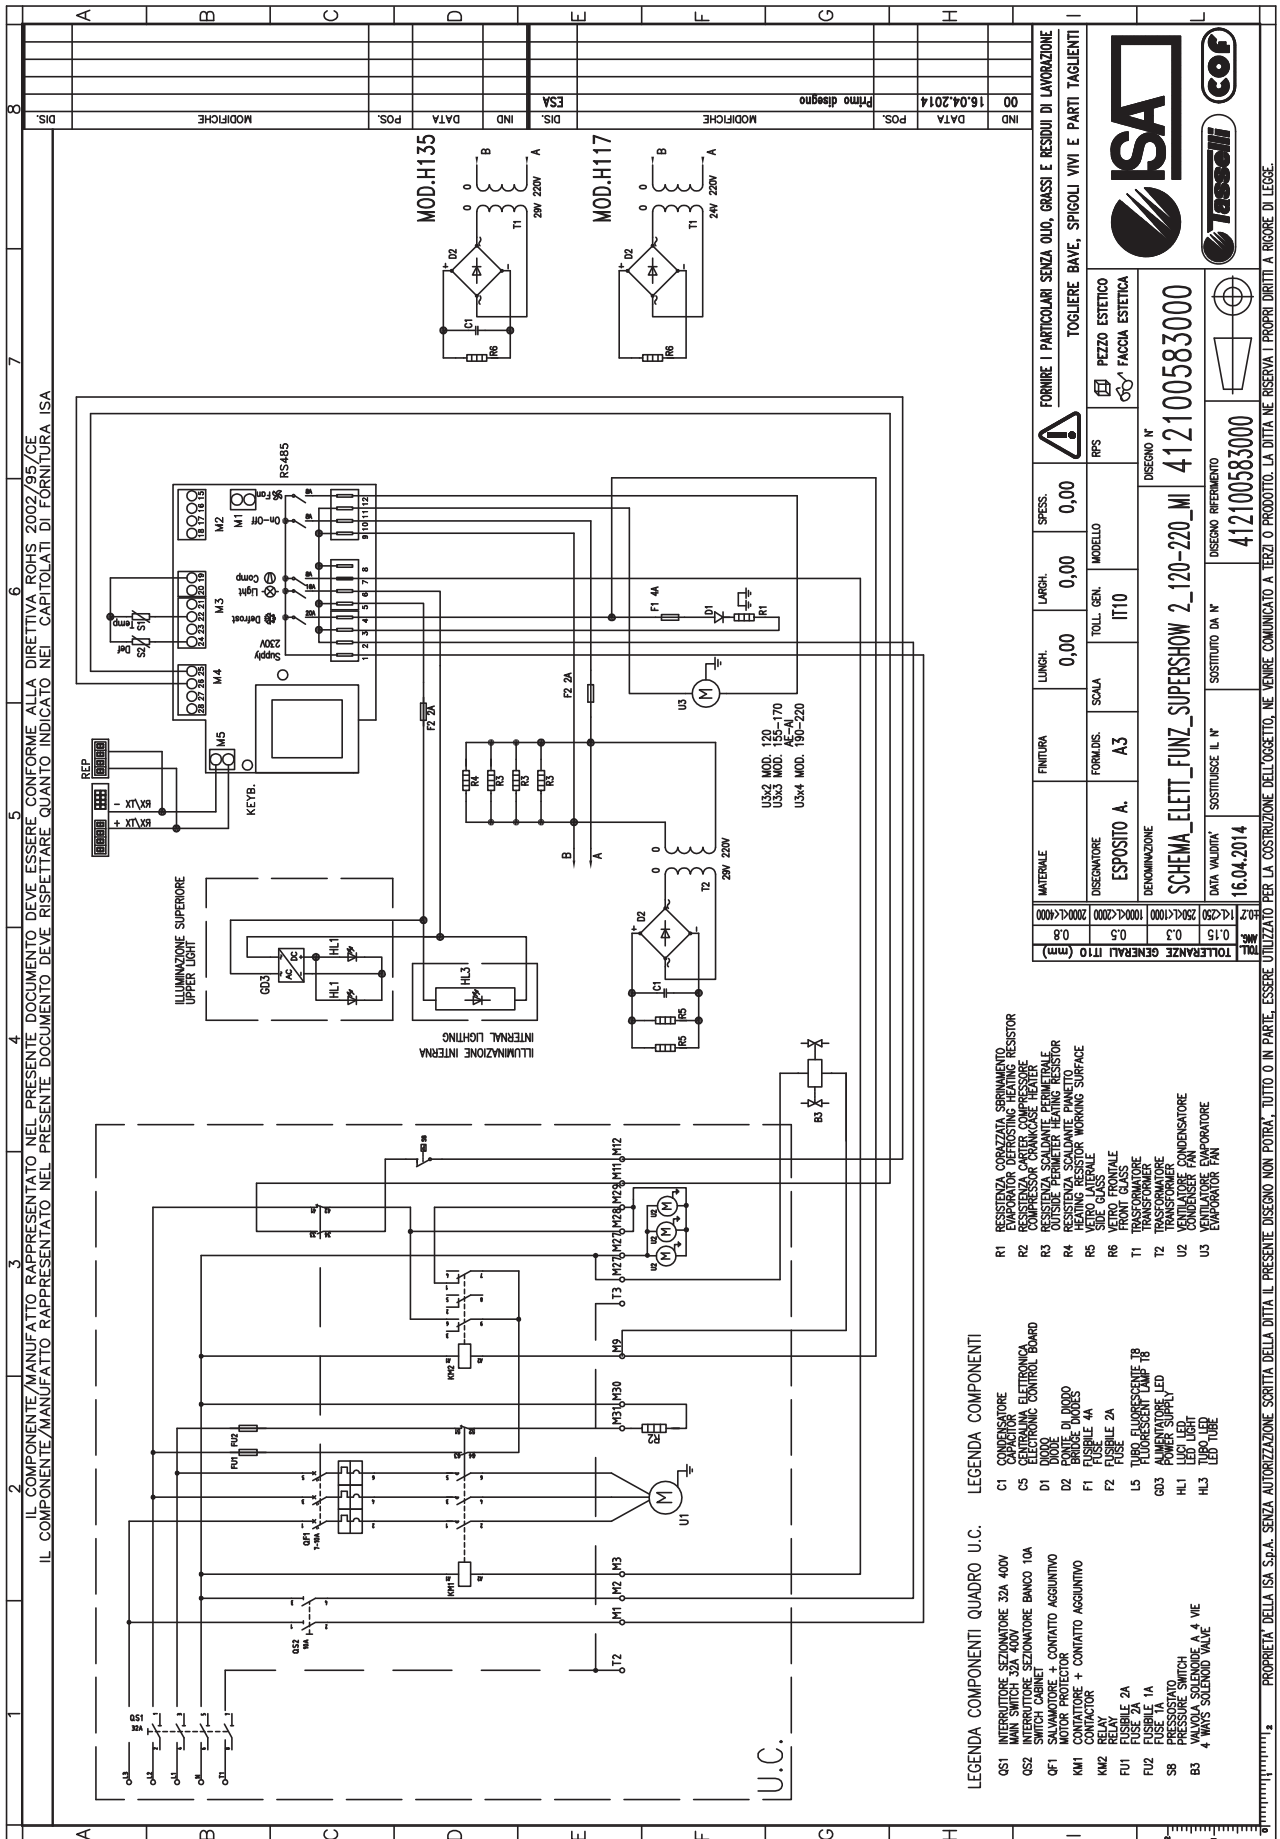

IL COMPONENTE/MANUFATTO RAPPRESENTATO NEL PRESENTE DOCUMENTO DEVE ESSERE CONFORME ALLA DIRETTIVA ROHS 2002/95/CE  
 IL COMPONENTE/MANUFATTO RAPPRESENTATO NEL PRESENTE DOCUMENTO DEVE RISPETTARE QUANTO INDICATO NEL CAPITOLATO DI FORNITURA ISA

IND	DATA	POS.	MODIFICHE
00	16.04.2014		Primo disegno
DIS			

MATERIALE	FINITURA	LUNGH.	LARGH.	SPESS.
ESPOSITORE	FORNIT. A.3	0,00	0,00	0,00
DISEGNO N°	MODELLO			
ESPOSITO A.	IT10			
SCHEMA ELET. FUNZ. SUPERSHOW 2_120-220_MI				
412100583000				
DATA VALIDITA'	SOSTITUISCE IL N°	DISEGNO RIFERIMENTO		
16.04.2014	412100583000			

PERI	PERI	PERI	PERI
0,8	0,15	0,3	0,5
2000<(1-800)	1000<(2-300)	2000<(1-800)	1000<(2-300)
TOLLERANZE GENERALI IT10 (mm)			


- LEGENDA COMPONENTI QUADRO U.C.
- QS1 INTERRITTORE SEZIONATORE 32A 400V
  - QS2 INTERRITTORE SEZIONATORE BANCO 10A
  - GF1 SWITCH CABINET
  - GF2 SWITCH CABINET
  - KM1 CONTATTORE + CONVITTO ARGUNTINO
  - KM2 RELAY
  - FU1 FUSIBILE 2A
  - FU2 FUSIBILE 1A
  - FU3 FUSIBILE 1A
  - S8 PRESSOSTATO SWITCH
  - B3 4 WAYS SOLENOID VALVE
- LEGENDA COMPONENTI
- C1 COMPENSATORE
  - C5 CENTRALINA ELETTRONICA
  - D1 DIODO
  - D2 DIODO
  - F1 BRIDGE DIODO
  - F2 FUSIBILE 4A
  - F3 FUSIBILE 2A
  - L5 TUBO ELASOTERMICO 18
  - G03 ALIMETRI SUPPLY LED
  - HL1 LED
  - HL2 LED
  - HL3 LED TUBE
- LEGENDA COMPONENTI
- R1 RESISTENZA CORAZZATA SPRIMMENTO
  - R2 EVAPORATORE DEFROSTING HEATING RESISTOR
  - R3 RESISTENZA PERIL COFF RESISTOR
  - R4 RESISTENZA SCALANTE HEATING RESISTOR
  - R5 HEATING RESISTOR HEATING SURFACE
  - R6 VETRO LATERALE
  - T1 TRANSFORMATORE
  - T2 TRANSFORMATORE
  - U2 VENTILATORE COMPENSATORE
  - U3 EVAPORATORE FAN

GELATOSUPERSHOW 2

USE AND MAINTENANCE MANUAL

428000533037



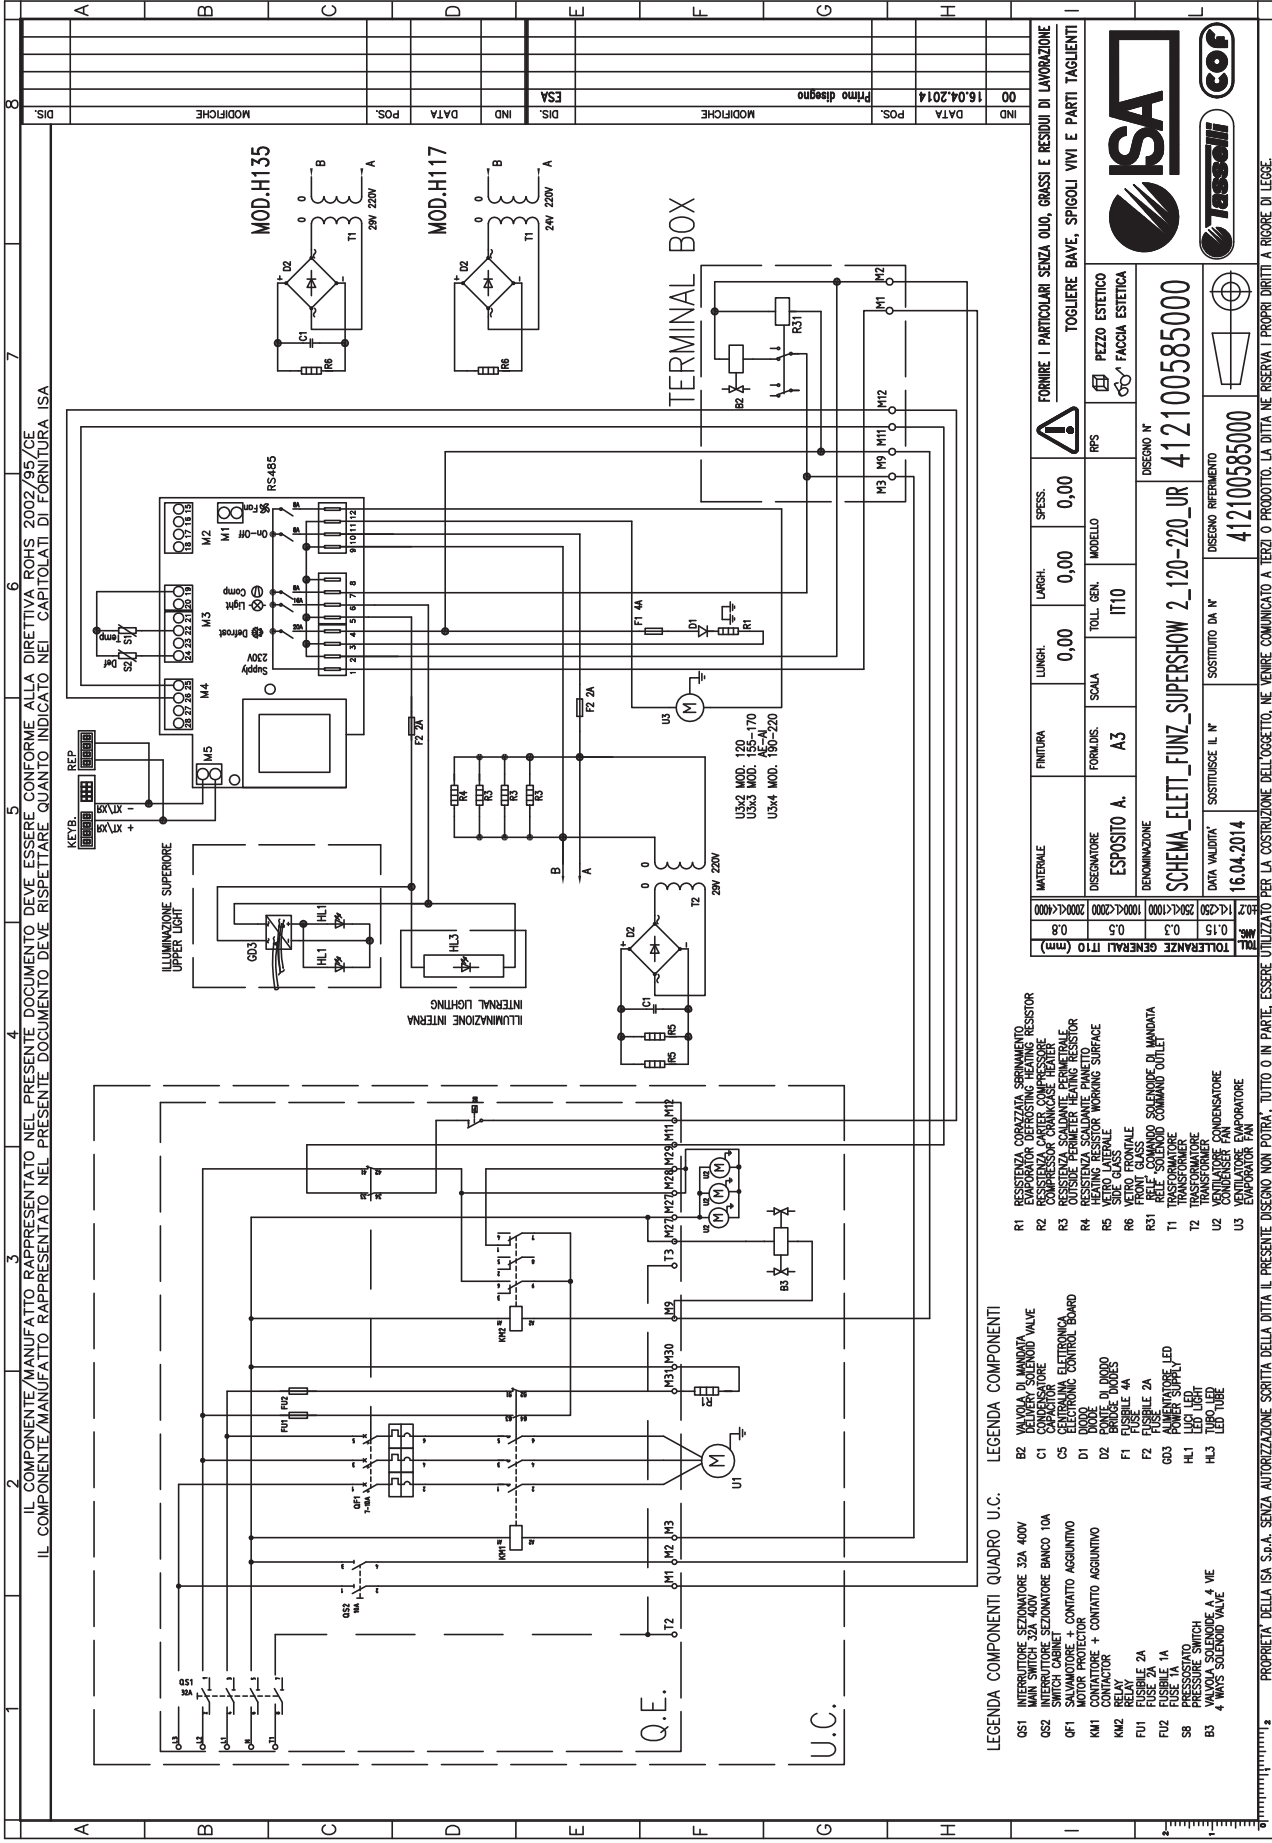

DIS	MODIFICHE	POS.	DATA	IND	DIS	POS.	DATA	IND	DIS	POS.	DATA	IND
00			16.04.2014		00		16.04.2014		00		16.04.2014	
												Primo disegno

FINITURA		LUNGH.	LARGH.	SPES.	FORNIRE I PARTICOLARI SENZA OLIO, GRASSI E RESIDUI DI LAVORAZIONE TOGLIERE BAVE, SPIGOLI VIVI E PARTI TAGLIANTI		
MATERIALE		0,00	0,00	0,00	PEZZO ESTETICO		
DESIGNAZIONE		FORMULAS.	SCALA	TOLL. GEN.	FACCIA ESTETICA		
ESPOSTO A.		A3	IT10	DISEGNO N°			
DENOMINAZIONE		SCHEMA_ELETT_FUNZ_SUPERSHOW_2_120-220_UR 412100585000					
DATA VALIDITA'		SOSTITUISCE IL N°		DISEGNO RIFERIMENTO		TOLLERANZE GENERALI IT10	
16.04.2014		412100585000		412100585000		0,8	
TOLLERANZE GENERALI IT10		TOLLERANZE GENERALI IT10		TOLLERANZE GENERALI IT10		0,5	
0,8		0,5		0,5		0,5	

MATERIALE		LUNGH.	LARGH.	SPES.	FORNIRE I PARTICOLARI SENZA OLIO, GRASSI E RESIDUI DI LAVORAZIONE TOGLIERE BAVE, SPIGOLI VIVI E PARTI TAGLIANTI		
DESIGNAZIONE		FORMULAS.	SCALA	TOLL. GEN.	PEZZO ESTETICO		
ESPOSTO A.		A3	IT10	DISEGNO N°			
DENOMINAZIONE		SCHEMA_ELETT_FUNZ_SUPERSHOW_2_120-220_UR 412100585000					
DATA VALIDITA'		SOSTITUISCE IL N°		DISEGNO RIFERIMENTO		TOLLERANZE GENERALI IT10	
16.04.2014		412100585000		412100585000		0,8	
TOLLERANZE GENERALI IT10		TOLLERANZE GENERALI IT10		TOLLERANZE GENERALI IT10		0,5	
0,8		0,5		0,5		0,5	

MATERIALE		LUNGH.	LARGH.	SPES.	FORNIRE I PARTICOLARI SENZA OLIO, GRASSI E RESIDUI DI LAVORAZIONE TOGLIERE BAVE, SPIGOLI VIVI E PARTI TAGLIANTI		
DESIGNAZIONE		FORMULAS.	SCALA	TOLL. GEN.	PEZZO ESTETICO		
ESPOSTO A.		A3	IT10	DISEGNO N°			
DENOMINAZIONE		SCHEMA_ELETT_FUNZ_SUPERSHOW_2_120-220_UR 412100585000					
DATA VALIDITA'		SOSTITUISCE IL N°		DISEGNO RIFERIMENTO		TOLLERANZE GENERALI IT10	
16.04.2014		412100585000		412100585000		0,8	
TOLLERANZE GENERALI IT10		TOLLERANZE GENERALI IT10		TOLLERANZE GENERALI IT10		0,5	
0,8		0,5		0,5		0,5	

MATERIALE		LUNGH.	LARGH.	SPES.	FORNIRE I PARTICOLARI SENZA OLIO, GRASSI E RESIDUI DI LAVORAZIONE TOGLIERE BAVE, SPIGOLI VIVI E PARTI TAGLIANTI		
DESIGNAZIONE		FORMULAS.	SCALA	TOLL. GEN.	PEZZO ESTETICO		
ESPOSTO A.		A3	IT10	DISEGNO N°			
DENOMINAZIONE		SCHEMA_ELETT_FUNZ_SUPERSHOW_2_120-220_UR 412100585000					
DATA VALIDITA'		SOSTITUISCE IL N°		DISEGNO RIFERIMENTO		TOLLERANZE GENERALI IT10	
16.04.2014		412100585000		412100585000		0,8	
TOLLERANZE GENERALI IT10		TOLLERANZE GENERALI IT10		TOLLERANZE GENERALI IT10		0,5	
0,8		0,5		0,5		0,5	

MATERIALE		LUNGH.	LARGH.	SPES.	FORNIRE I PARTICOLARI SENZA OLIO, GRASSI E RESIDUI DI LAVORAZIONE TOGLIERE BAVE, SPIGOLI VIVI E PARTI TAGLIANTI		
DESIGNAZIONE		FORMULAS.	SCALA	TOLL. GEN.	PEZZO ESTETICO		
ESPOSTO A.		A3	IT10	DISEGNO N°			
DENOMINAZIONE		SCHEMA_ELETT_FUNZ_SUPERSHOW_2_120-220_UR 412100585000					
DATA VALIDITA'		SOSTITUISCE IL N°		DISEGNO RIFERIMENTO		TOLLERANZE GENERALI IT10	
16.04.2014		412100585000		412100585000		0,8	
TOLLERANZE GENERALI IT10		TOLLERANZE GENERALI IT10		TOLLERANZE GENERALI IT10		0,5	
0,8		0,5		0,5		0,5	

- LEGGENDA COMPONENTI QUADRO U.C.**
- Q51 INTERRUPTORE SEZIONATORE 32A 400V
  - Q52 INTERRUPTORE SEZIONATORE BANCO 10A
  - QF1 SALVAMOTORE A CONTATTO AGGIUNTIVO
  - KM1 CONTATTORE + CONTATTO AGGIUNTIVO
  - KM2 RELAY
  - FU1 FUSIBILE 2A
  - FU2 FUSIBILE 1A
  - S8 ALIMENTAZIONE LED
  - PS8 PRESSOSTATO
  - B3 VALVOLA SOLENOID A 4 VIE
  - 4 VALVOLA SOLENOID VALVE
- LEGGENDA COMPONENTI**
- R1 RESISTENZA CORAZIATA SRRIVAMENTO
  - R2 EVAPORATORE DEFRIGERANTE HEATING RESISTOR
  - R3 COMPRESSORE CONDENSATORE
  - R4 RESISTENZA SCALDANTE PERMITSISTOR
  - R5 RESISTENZA SCALDANTE PANNELLO
  - R6 RESISTENZA SCALDANTE SUPERFICIE
  - R7 SOLE GLASS
  - R8 VETRO FRONTALE
  - R9 RELAY CAUSANDO SOLENOIDE DI MANDATA
  - T1 TRANSFORMATORE
  - T2 TRANSFORMATORE
  - U2 CONDENSATORE
  - U3 VENTILATORE EVAPORATORE

PROPRIETA' DELLA ISA S.p.A. SENZA AUTORIZZAZIONE SCRITTA DELLA DITTA IL PRESENTE DISEGNO NON POTRA' TUTTO O IN PARTE, ESSERE UTILIZZATO PER LA COSTRUZIONE DELL'OGGETTO, NE VENIRE COMUNICATO A TERZI O PRODOTTO. LA DITTA NE RISERVA I PROPRI DIRITTI A RICORDO DI LEGGE.



GELATOSUPERSHOW 2

USE AND MAINTENANCE MANUAL

428000533037







*Idee che lavorano con te*

**ISA S.r.l.**

Via del Lavoro, 5  
06083 Bastia Umbra  
Perugia - Italy  
Tel. +39 075 80171  
Fax +39 075 8000900

**[www.isaitaly.com](http://www.isaitaly.com)**